## Celtic Knot Rollerball & Fountain Pen Kits Assembly Instructions Required Accessories:

- 7mm Pen Mandrel
- 3 piece Bushing Set RZ-RP234#-BU
- 12.6mm Drill Bit
- 10.6mm Drill Bit
- Universal Barrel Trimmer
- Sandpaper/Finish
- Glue (Thick CA or Epoxy)

## **Preparing the Blank:**

• Prepare a master blank of at least 3/4" square. Cut two sections to the length of each tube. (Add 1/16" for trimming)

Mark the center of each blank.

- Drill a centered hole lengthwise through each blank.
  Upper blank (shorter tube)—drill a 12.6mm hole through.
  Lower blank (longer tube)—drill a 10.6mm hole through.
- Glue each tube in the proper blank. Spread the glue over each tube. Insert the tube into the blank with a twisting motion to spread the glue evenly inside. Center each tube lengthwise inside the blank.
- When glue dries, square the ends of each blank.




## **Turning the Blank**

- Mount the bushings and blanks according the diagram above.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper



grits.

• Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure.

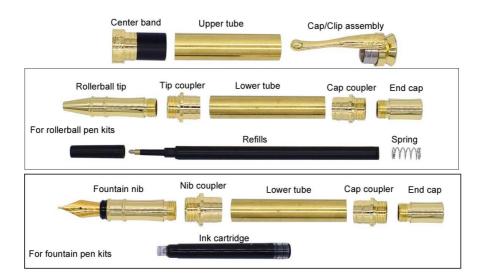

## **Assembly**

NOTE: Line up the components according to the above diagram.

- Press the cap/clip assembly to one end of the upper tube (shorter tube).
- Press the center band into the opposite end of the upper tube(shorter tube).
- Place the cap coupler into the end of the lower tube(longer). Thread the cap into the cap coupler.
- Press the nib coupler (tip coupler) into the opposite end of the lower tube(longer).
- Rollerball ---- Insert the Spring with the Refill into the lower tube(longer). Thread the Rollerball nib into the Nib coupler.
- Fountain ----- Attach the Ink cartridge to the back of the Fountain nib, then thread the Fountain nib into the Nib coupler.

